

Adapter für Anhängerkupplung (VBK0017)

Der Adapter wird benötigt, wenn eine Anhängerkupplung für Achsmontage an einem E-Bike mit verstell-baren Ausfallenden (sog. Slider, verwendet bei Charger, Culture, Delite, Nevo, Packster) montiert wird.

Lieferumfang

- 1x Anhänger Kupplungsadapter ①
- 1x Nordlock-Scheiben M10 (Paar) ②
- 1x Mutter selbstsichernd (M8 DIN982 A2) ③
- 1x U-Scheibe (d=8,4mm DIN 125 A2) ④
- 1x Zylinderkopfschraube (Torx M8x35 ISO 14580 A2) ⑤
- 1x Zylinderkopfschraube (Torx M8x40 ISO 14580 A2) ⑥
- 1x Zylinderkopfschraube (Torx M8x45 ISO 14580 A2) ⑦
- 1x Zylinderkopfschraube (Torx M8x50 ISO 14580 A2) ⑧

Montage

1. Hintere linke Slider-Befestigung entfernen.
2. Einzelteile in der Reihenfolge wie in Abb. 1 montieren. Dabei folgendes beachten:
 - Zylinderkopfschraube (⑤, ⑥, ⑦ oder ⑧) muss ca. 20mm länger sein als die in Schritt 1 demontierte Schraube.
 - Gegebenenfalls die auf der Innenseite des Sliders verwendete Vierkantsmutter durch selbstsichernde Mutter ③ ersetzen (siehe Abb. 3).
3. Zylinderkopfschraube (⑤, ⑥ oder ⑦) festziehen. **Anzugsmoment 15 – 18 Nm.**

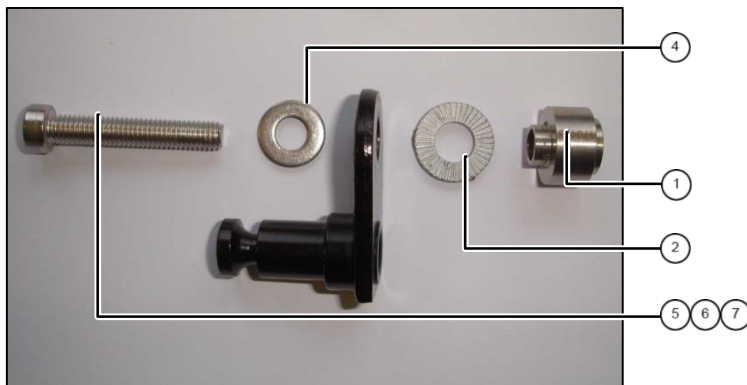


Abb. 1: Reihenfolge

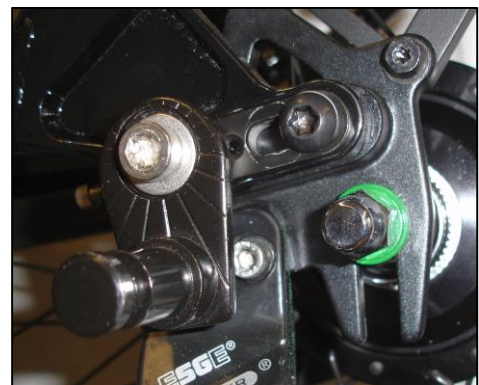


Abb. 2: Charger, montierte Anhängerkupplung



Abb. 3: Delite, Innenseite Slider



Abb. 4: Delite, montierte Anhängerkupplung

Adapter for Trailer Hitch (VBK0017)

Adapter for Trailer Hitch (VBK0017)

The adapter is needed at E-Bikes with adjustable rear drop outs (so-called sliders, use at Charger, Culture, Delite, Nevo, Packster) for the installation of a trailer hitch.

Scope of Delivery

- 1x Adapter for trailer hitch ①
- 1x Nordlock washer M10 (pair) ②
- 1x self-locking nut (M8 DIN982 A2) ③
- 1x washer (d=8,4mm DIN 125 A2) ④
- 1x bolt (Torx M8x35 ISO 14580 A2) ⑤
- 1x bolt (Torx M8x40 ISO 14580 A2) ⑥
- 1x bolt (Torx M8x45 ISO 14580 A2) ⑦
- 1x bolt (Torx M8x50 ISO 14580 A2) ⑧

Mounting the Adapter

1. Remove rear left slider bolt.
2. Assemble parts as shown in fig. 1. Respect this:
 - bolt (⑤, ⑥, ⑦ or ⑧) must be approx. 20mm longer as origin bolt at step 1.
 - if necessary replace square nut at the inside by self-locking nut ③ (see fig. 3).
3. Tighten bolt (⑤, ⑥ or ⑦). **Tightening torque 15 – 18 Nm.**

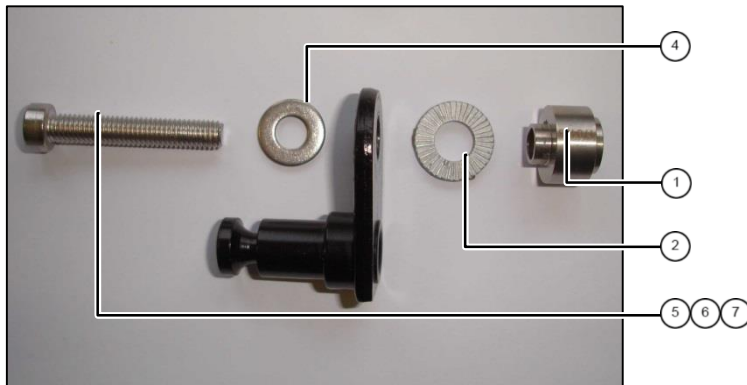


fig. 1: assembly order

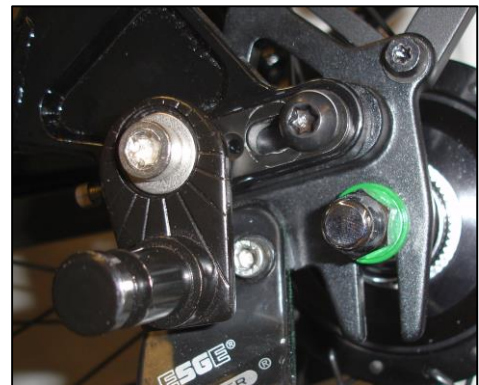


fig. 2: Charger, assembled trailer hitch



fig. 3: Delite, inside of Slider



fig. 4: Delite, assembled trailer hitch